

EZ-RAX

Loading/Unloading Instructions

All Drawings Are For Illustration Only.

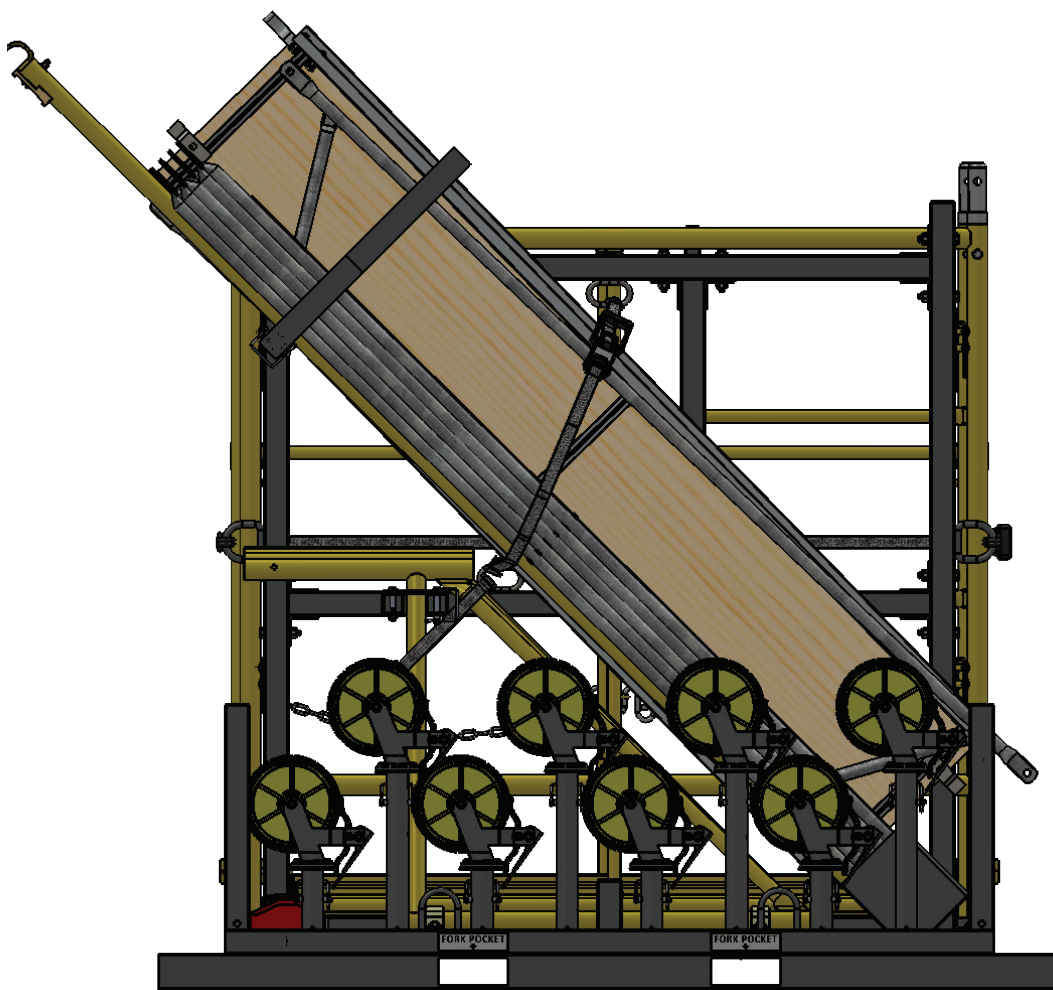


TABLE OF CONTENTS

Rack Capacity2

Instructions:

Scaffold Components3

Unloading4-5

Strapping5

Loading6-9


RACK CAPACITY

Part Description	Qty	Qty	Qty
Rolling Tower Height:	20'	15'	10'
Step Frame - 5' x 5' - inserts attached	8	6	4
Diagonal Cross Brace	8	6	4
Caster - 8"	8	8	4
Walkboard - Tuf-N-Lite	3	3	3
Outrigger	4	4	0
Cat-A-Corner Brace	1	1	1
EZ Guard End Panel	2	2	2
EZ Guard Side Panel	2	2	2
EZ Guard Side Toeboard	2	2	2
Gravity Pig Tail Pin	16	12	8
Hinge Pin	8	8	8

WARNING

Improper erection, dismantling or use of **Bil-Jax** storage units may result in serious injury or death!! Erectors, dismantlers and users of **Bil-Jax** storage units must read and fully understand these Safety Rules and Instructions as well as all federal OSHA, state, and local regulations pertaining to this equipment prior to its use. For any questions concerning the proper erection, dismantling, or use of **Bil-Jax** storage unit, please call 1-800-537-0540 before use.


SCAFFOLD TOWER PARTS

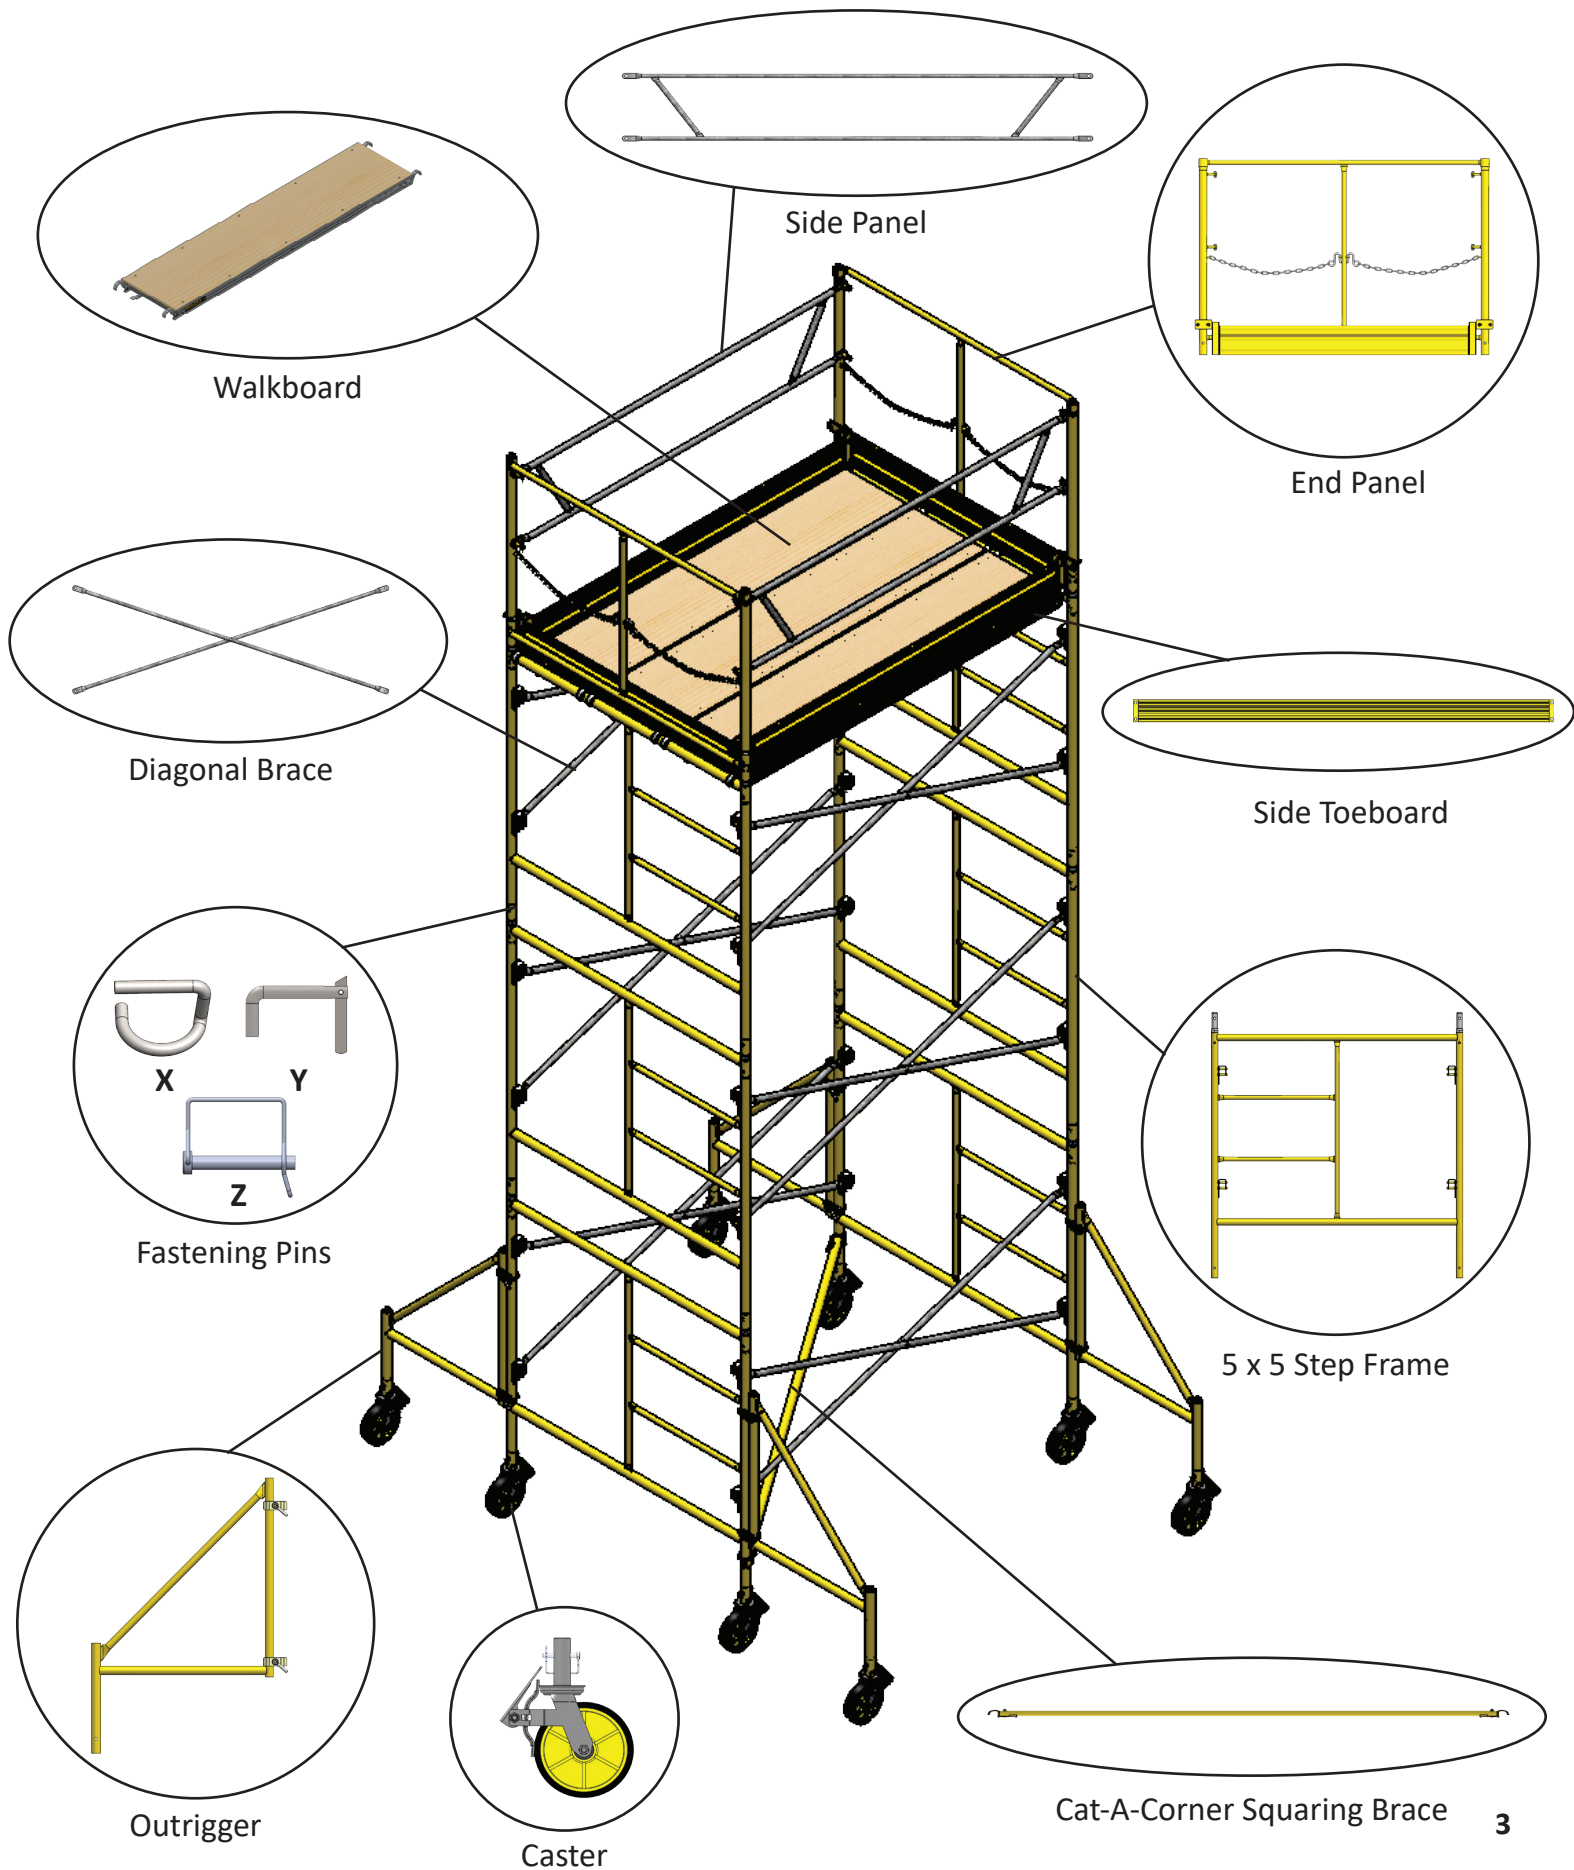


UNLOADING INSTRUCTIONS - EZ-RAX

UNLOADING THE RACK



- 1) Loosen the **10' strap** - attached to ring **A** and **B** on the frame side of the rack. Unhook strap from ring **A** and **B** and set aside.

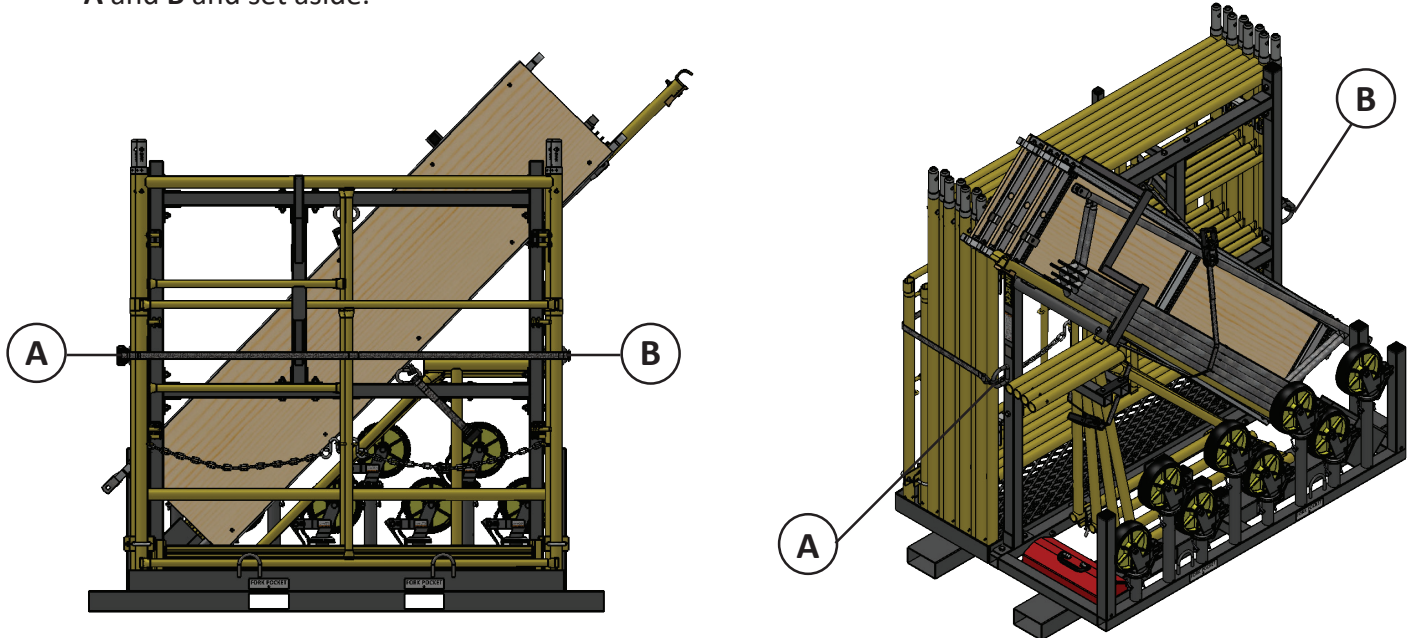



- 2) Loosen the **6' strap** - attached to ring **C** and **D** on the caster side of the rack. Unhook strap from ring **C** and unwrap strap from walkboards and braces. Unhook other end of strap from ring **D** and set aside for future loading.
- 3) Loosen the second **6' strap** - attached to ring **D** and **E** on the caster side of the rack. Unhook strap from ring **D** and unwrap strap from outriggers. Unhook from ring **E** and set aside.

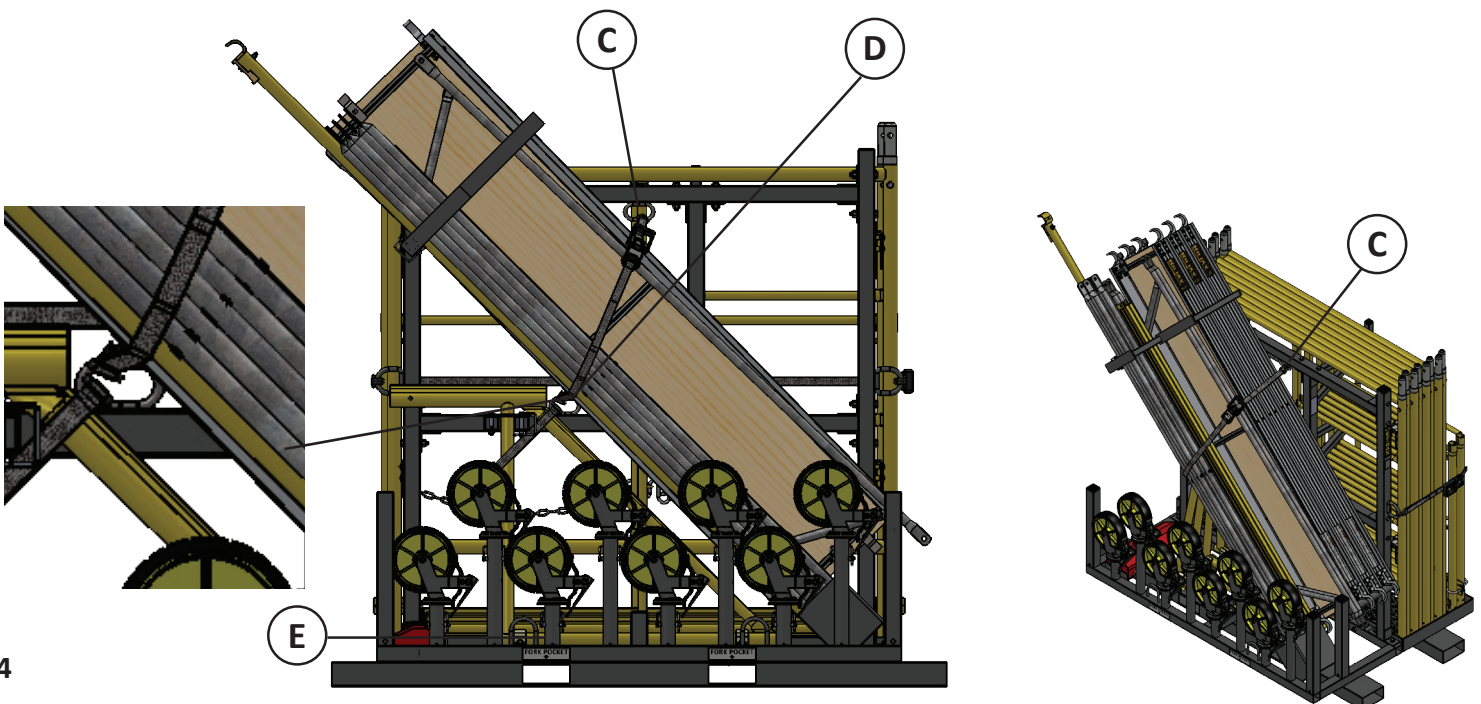

- 4) Remove snap pin from the bracket and support tube. Pull bracket out and set aside for future loading. Place snap pin back into support bar, so as not to misplace.

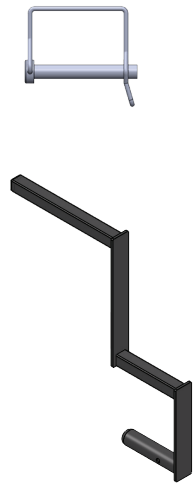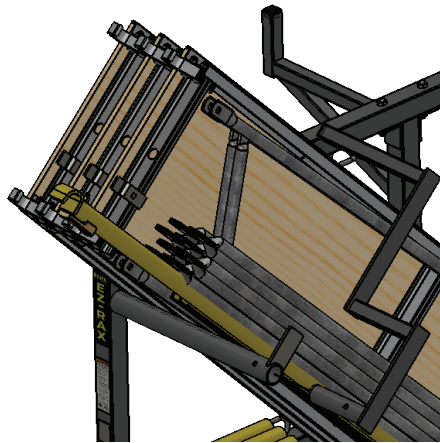

- 5) Remove snap pin from the outrigger latch and rotate open. Place snap pin back into support bar, so as not to misplace.

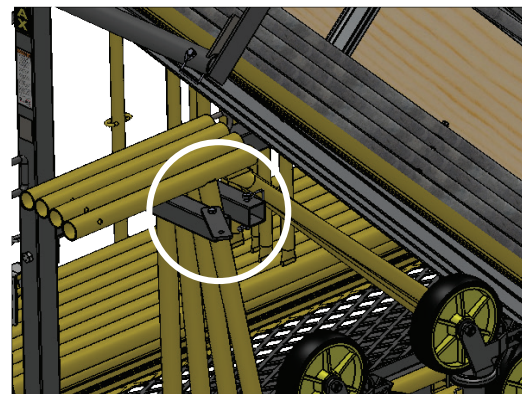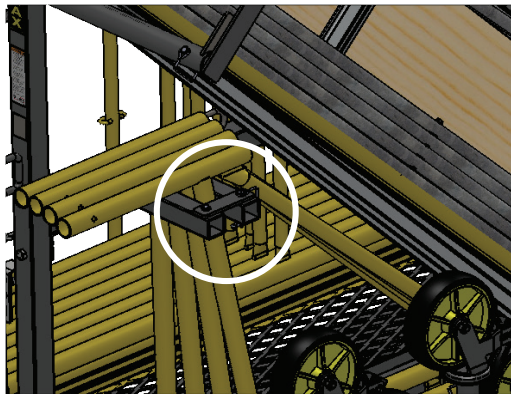

INSTRUCTIONS - RATCHET STRAP

NOTE - Once EZ-RAX is unloaded, ensure all straps are together for easy use during loading.

If the ratchet straps come apart, follow these steps:

- 1) Feed end of strap through the lower slot in the handle ratchet, coming up from the bottom. Pull so more strap is available.
- 2) Hook each end of the strap where needed. Pull loose part of strap tight. Then start ratcheting by pulling the larger black handle until tight and secure.






⚠ WARNING

To prevent damage to building overhangs or canopies, always be aware of the overall clearance height of the EZ-RAX once it is loaded on the transport vehicle.


LOADING INSTRUCTIONS - EZ-RAX

LOADING THE RACK


- 1) Remove snap pin from latch to open. Place outriggers on the rack between two supports. Rotate latch to hold outriggers in place. Secure latch in place with snap pin.

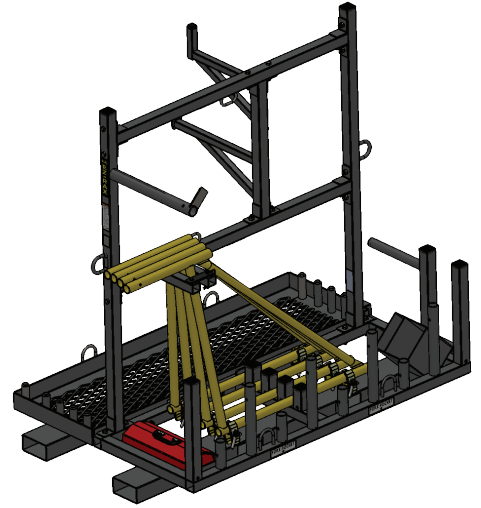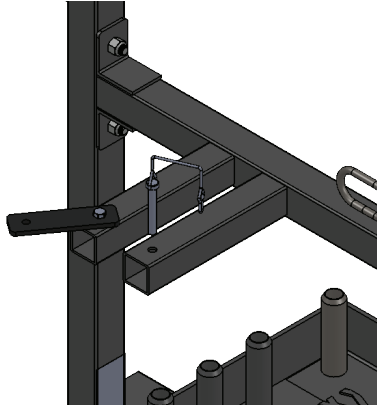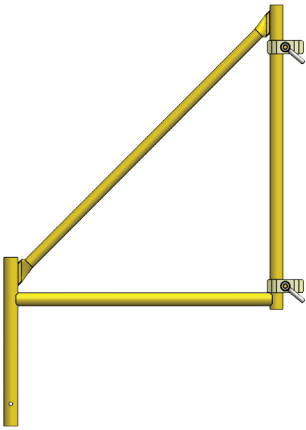


- 2) Place walkboards, with the underside facing out.

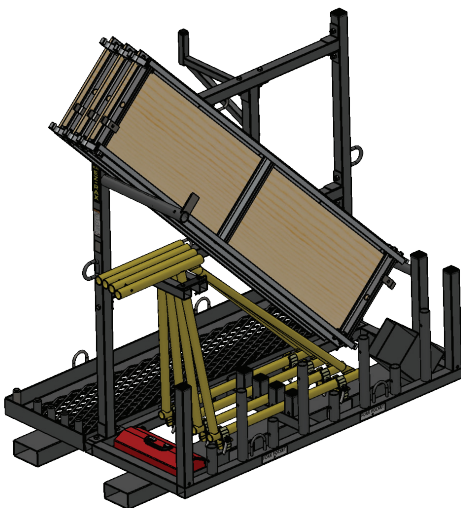


- 3) Place side panels in front of walkboards.

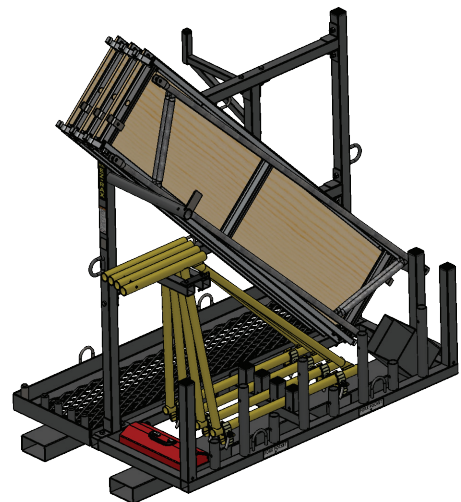



- 4) Place side toeboards in front of the side panels. Slide toeboards into the bottom rack pocket.

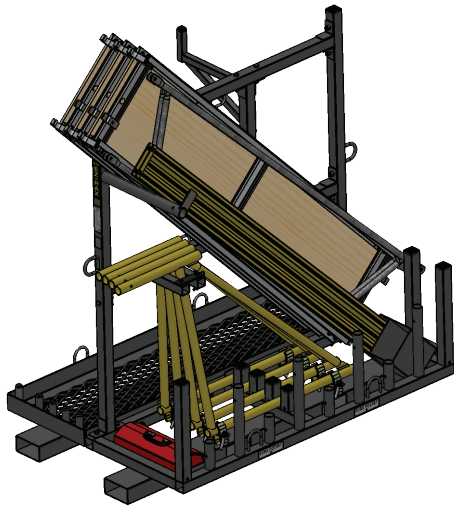



- 5) Place cat-a-corner brace in front of the toeboards and slide into the bottom rack pocket.

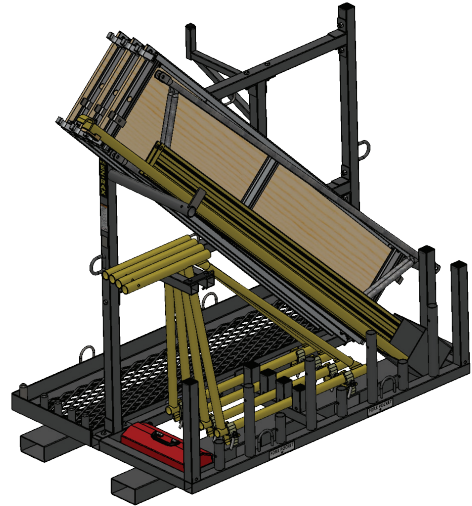



- 6) Place cross braces in front of the side toeboards and on top of the cat-a-corner brace. Slide braces into the bottom rack pocket.

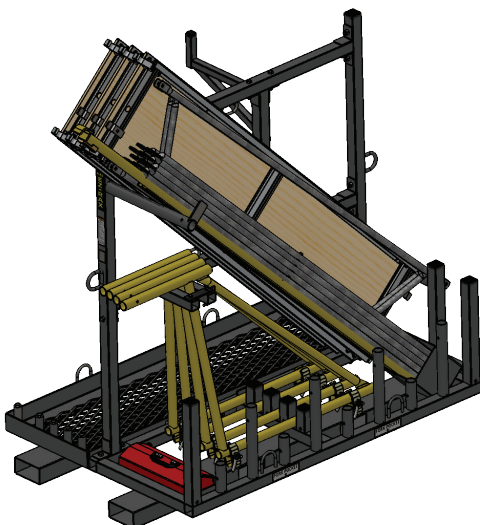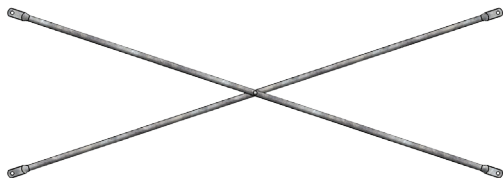



- 7) Place casters in front of the outriggers. Insert the stem end into the vertical tube. Secure each in place with a snap pin.

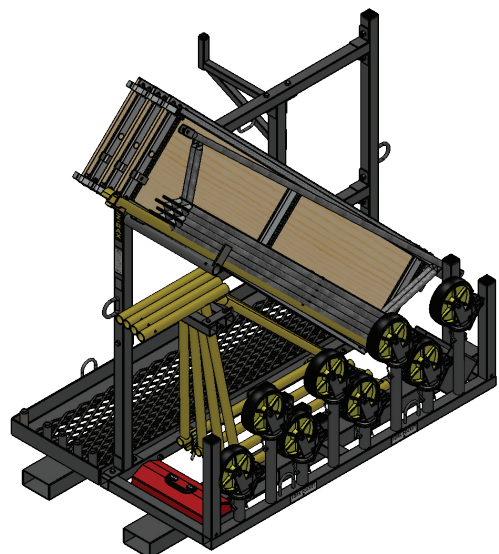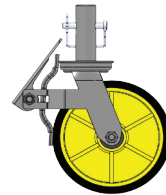


- 8) Place frames on the other side of the rack on the top support arm. Insert the bottom of the scaffold frame over the tube to hold in place.

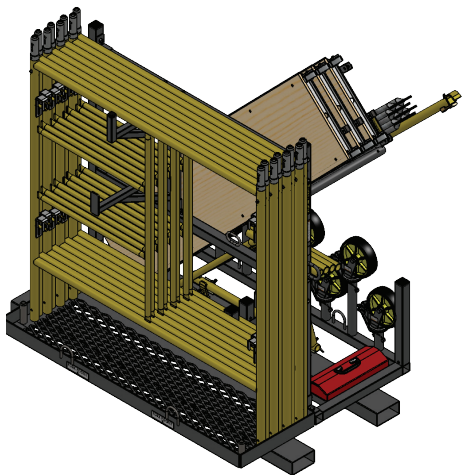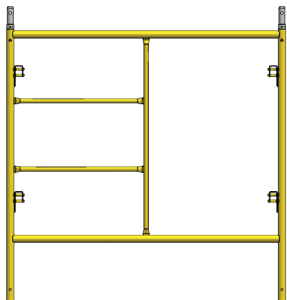


- 9) Place end guardrail panels in front of the frames on the lower support arm. Insert the bottom of each panel over the tube to hold in place.

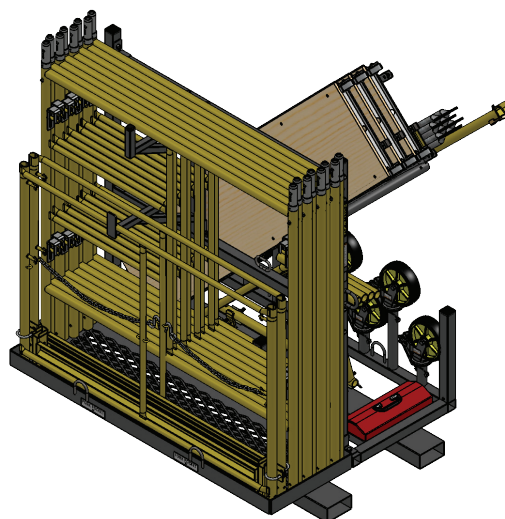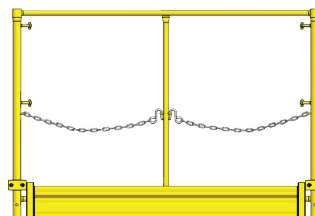

- 10) Then, remove snap pin from support tube. Insert the bracket into the support tube. Secure in place with a snap pin.


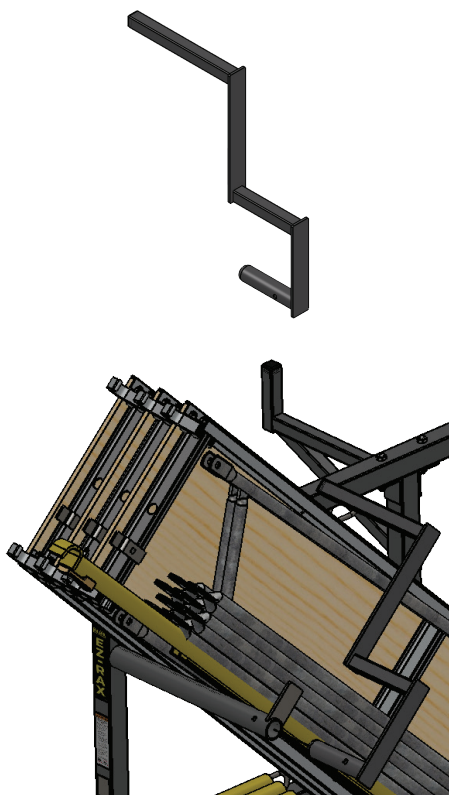


- 11) Use **10' strap** - attach to ring **A** and wrap across the frames and end guard panels, and attach to ring **B**. Tighten strap.

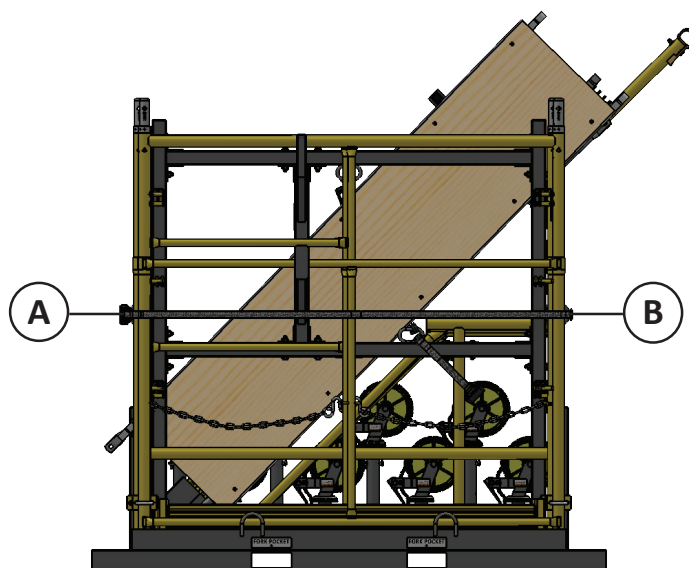

- 12) Use **6' strap** - attach to ring **C** and wrap around walkboards, cross braces, side panels, and toeboards and attach to ring **D**. Tighten strap.
- 13) Use **6' strap** - attach to ring **D** and wrap around the outriggers, and attach back to ring **D**. Tighten strap.
- 14) Check to make sure everything is secure.

DO NOT transport if straps are missing or in bad condition.

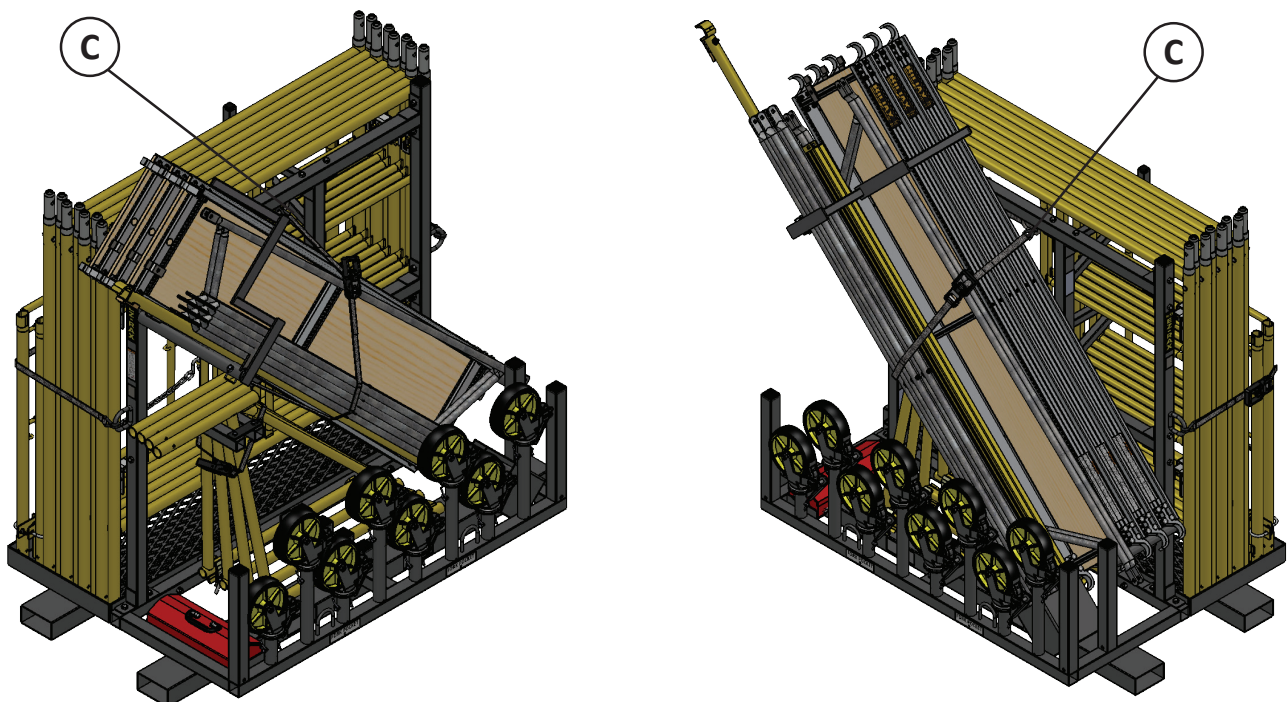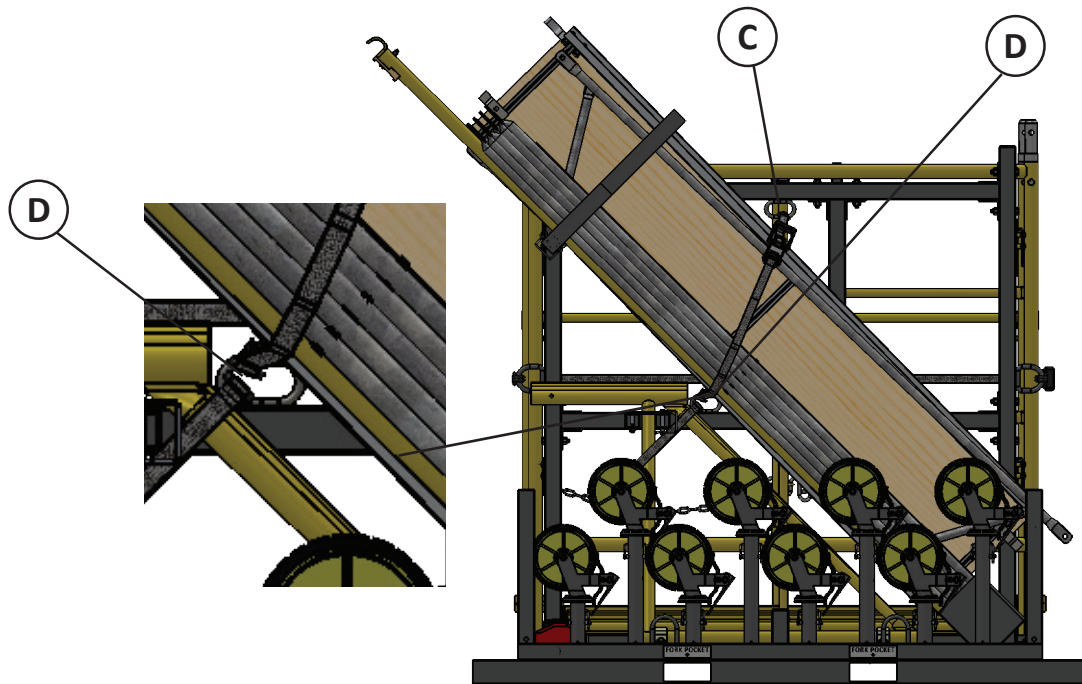

EZ-RAX

Unloading/Loading Instructions



125 Taylor Parkway
Archbold, OH 43502

Phone: 419.445.8915
Toll Free: 800.537.0540
Fax: 419.445.0367

biljax.com

©2023 BilJax, Inc.

P/N : LL-204-95 Rev D
Last Revision: March 2023